

J434

DESCALER

This product is a non-foaming cleaner that can be used for descaling dishwashers, glass washers, coffee machines and other appliances. It contains a special blend of acids and non-foaming detergents.

DIRECTIONS: Circulate or soak a solution of 1 part descaler to 4 parts of water for about 10 minutes. Drain and rinse. For major scale build up, use a stronger solution and contact time of up to 4 hours.

CAUTION: This product is an acid. Do NOT mix with other chemicals and avoid contact with aluminum.

FOR COMMERCIAL USE ONLY

2016-11-21

**Intertek**